

I N S T E O N<sup>®</sup>




**Lock Controller**  
Quick Start Guide

## Lock Controller

Unlock  
Sent

Lock  
Sent

Status LED

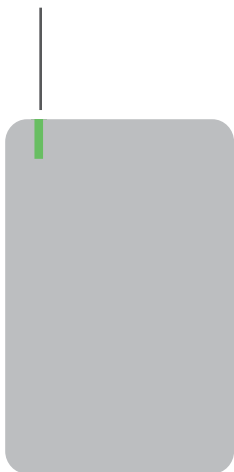


Set  
Button


The actual lock state may differ from Lock Controller's status LED if the lock has been manually activated.

## Installation

- 1 During setup, keep Lock Controller within 5 feet of your door lock. Use an extension cord if necessary.

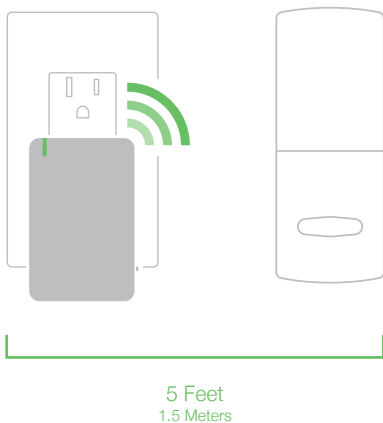


- 2 Open the door lock cover and tap the S button.

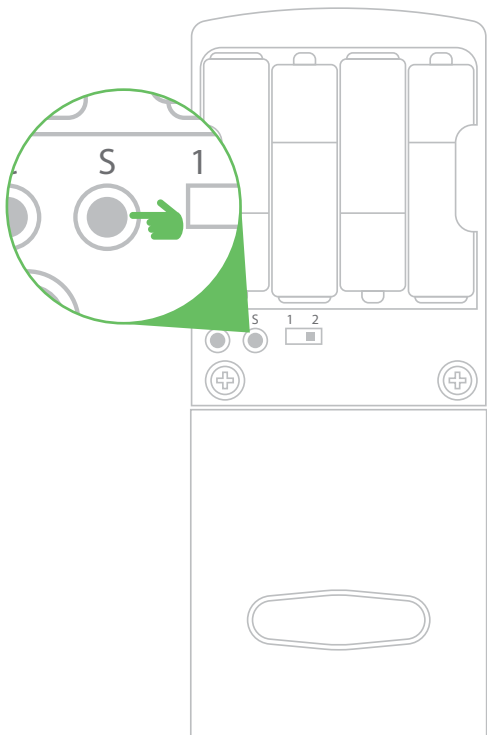


3

Tap the set button on Lock Controller.  
Your door lock will double-beep and  
the Lock Controller status LED will  
turn red.

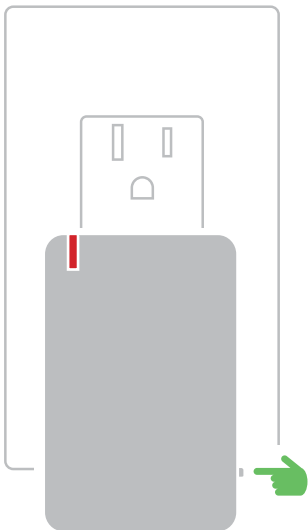


4

After setup, Lock Controller can be placed up to 30 feet away from your door lock.

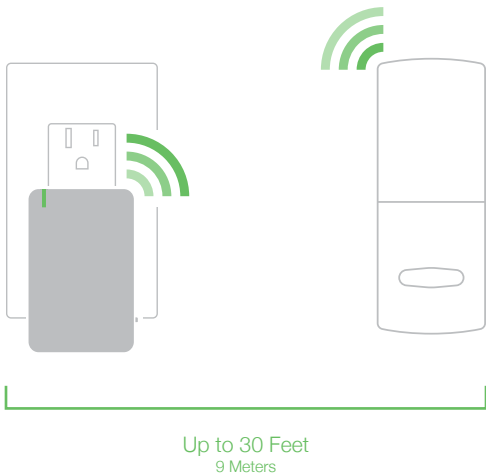

## Linking to the Hub

Follow your Insteon Hub instructions to add Lock Controller to your Insteon Hub.

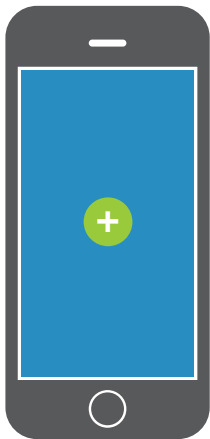

## Learn More

For the complete Owner's Manual and more, visit: **[insteon.com/support](http://insteon.com/support)**

