


I N S T E O N[®]



INSTEON Range Extender


Quick Start Guide

INSTEON Range Extender

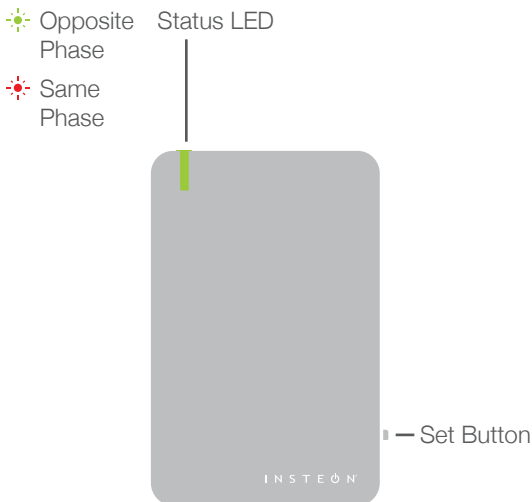



Installation

Plug the Range Extender into an unswitched wall outlet.

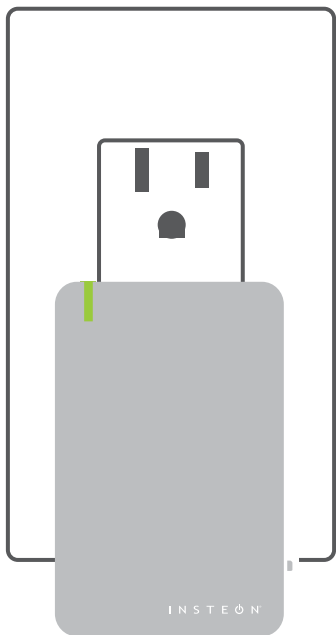


Placement

When extending the reach of your INSTEON network, locate the Range Extender near your INSTEON RF device.

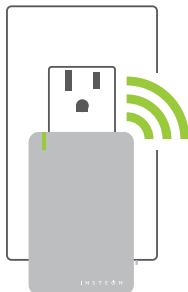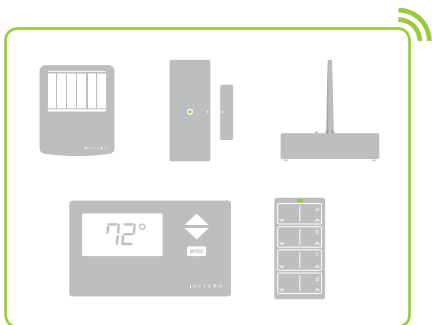

Bridging Electrical Phases (Optional)

- 1 To begin phase detection, quickly tap the Range Extender's set button four times.

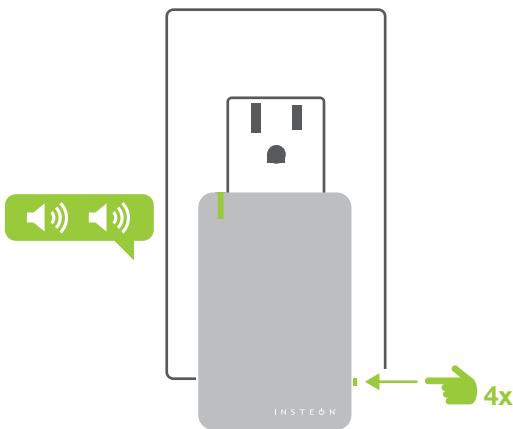

2


Inspect the status LED of a second Range Extender or any Dual-Band INSTEON device.



Phases are correctly bridged




Try a different outlet; phases are not correctly bridged

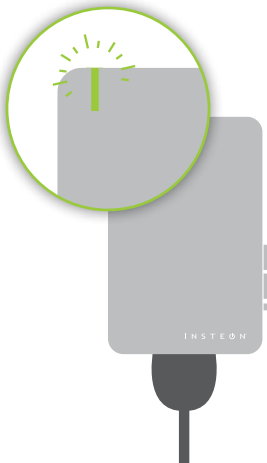

3

Exit phase detection by tapping the set button on the Range Extender.

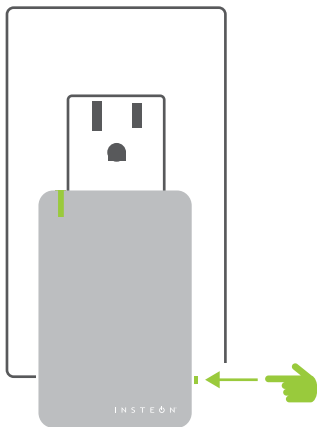

Learn More

For the complete Owner's Manual, video tutorials, product support and more, visit:
insteon.com/support

