

FanLinc™
INSTEON® Remote Control Light & Fan Controller
(Dual-Band)
Owners Manual (#2475F)




Z
G
E
T
S
N
I

About FanLinc	3
Features & Benefits	3
What's in the Box?	3
Installation	4
Identifying the Electrical Wires in your Home	4
INSTEON Scenes.....	5
Make Fan an INSTEON Responder	5
Make Light an INSTEON Responder	5
Remove FanLinc from a Scene as a Responder	6
LED and Beeper Behavior.....	6
LEDs	6
Beeper	7
Advanced Features	7
Software Only Settings	7
Using FanLinc as a Phase Bridge	7
Add an X10 Address.....	8
Factory Reset	8
Specifications	8
Troubleshooting.....	10
Certification and Warranty	11
Certification.....	11
FCC & Industry Canada Compliance Statement.....	11
Limited Warranty	11
Limitations.....	12

About FanLinc

FanLinc is designed to easily incorporate both fan speed and light control within your INSTEON network. It is a dual-load responder simultaneously acting as a light fixture dimmer plus a 4 speed fan controller (off, low, medium & high).

Control from any INSTEON controller such as KeypadLinc, Mini Remote / RemoteLinc 2 and software.

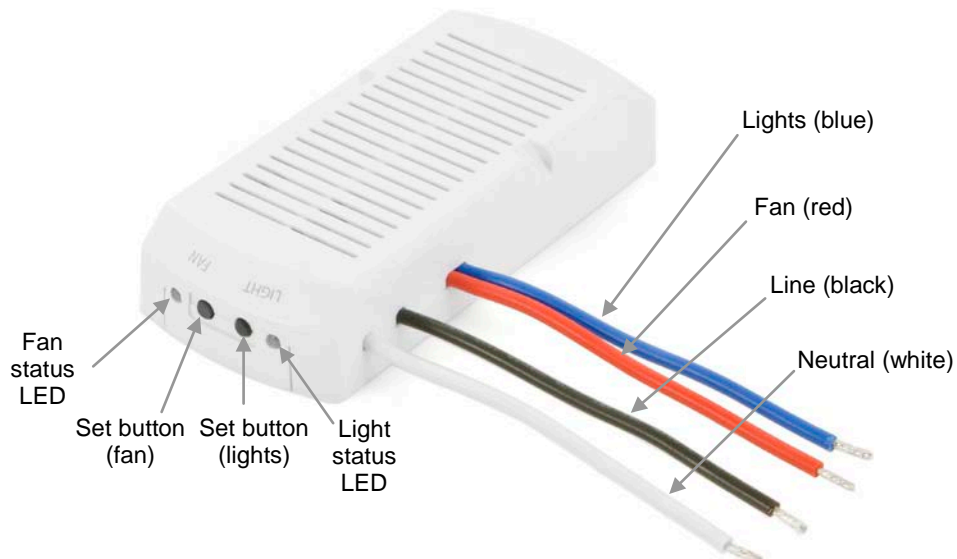

Features & Benefits

- 4 Speed fan controller (off, low, medium & high)
- 300 Watt Incandescent Dimmer
- X10 Compatible (1 address for light, 1 address for fan)
- Dual-band repeater and access point
- Designed to fit inside most ceiling fan cowlings
- Dual set buttons & LEDs and a beeper for simple setup
- All settings retained through power outages
- 2 year Warranty

What's in the Box?

- FanLinc
- Wire nuts
- 1 cable tie
- Quick-Start Guide

Installation

CAUTIONS AND WARNINGS

Read and understand these instructions before installing and retain them for future reference.

FOR CEILING FANS ONLY

FanLinc is intended for installation in accordance with the National Electric Code and local regulations in the United States or the Canadian Electrical Code and local regulations in Canada. Use indoors only. FanLinc is not designed nor approved for use on power lines other than 120VAC, 50Hz / 60Hz, single phase. Attempting to use FanLinc on non-approved power lines may have hazardous consequences.

Recommended installation practices:

- Use only indoors or in an outdoor rated box
- Be sure that you have turned off the circuit breaker or removed the fuse for the circuit you are installing FanLinc in. Installing FanLinc with the power on will expose you to dangerous voltages.
- Connect only copper or copper-clad wire to FanLinc
- FanLinc may feel warm during operation. The amount of heat generated is within approved limits and poses no hazards. To minimize heat buildup, ensure that the area surrounding the FanLinc air vents is as clear of clutter as possible.
- To reduce the risk of overheating and possible damage to other equipment, use FanLinc load output to control no more than 300 watts of 120VAC incandescent lamps plus no more than 1 Amp of Fan load. Dimming an inductive load (by connecting to the light load wire), such as a fan or transformer, could cause damage to the dimmer, the load bearing device, or both. If the manufacturer of the load device does not recommend dimming, use a non-dimming INSTEON on/off switch. **USER ASSUMES ALL RISKS ASSOCIATED WITH DIMMING AN INDUCTIVE LOAD.**
- You will need a flathead screwdriver, a Phillips head screwdriver and a voltage meter to install FanLinc

Identifying the Electrical Wires in your Home

To install FanLinc, you will need to identify the following four wires:

- Line - usually black, may also be called HOT or LIVE, carries 120VAC electricity into the electrical box
- Neutral - usually white commonly daisy chained from box to box usually appearing as a white wire bundle
- Load - usually black, blue or red
- Ground - Bare copper wire or metal fixture (if grounded)


If you are having difficulties identifying wires, consult an electrician to help you.

IMPORTANT!

- If you have any difficulties or questions, consult an electrician. If you are not knowledgeable about, and comfortable with electrical circuitry, you should have a qualified electrician install the product for you.

- 1) Write down the INSTEON ID (e.g., 12.34.56) for reference
- 2) Using your ceiling fan pull chains, set fan to highest speed and turn light on (note: once installed, FanLinc will control all fan and light functions)
- 3) Turn off the breaker (remove fuse) supplying power to the fan
- 4) Remove the ceiling fan from the electrical box
- 5) Identify line, neutral and load lines for fan and light separately
- 6) Disconnect wires from the ceiling fan (and light if applicable)
- 7) Connect FanLinc white wire and the fixture neutral wire to the house neutral with wire nut
- 8) Connect FanLinc red wire to the fixture fan wire with a wire nut
- 9) Connect FanLinc blue wire to the fixture light wire (if fixture does not have a light, cap the blue wire)
- 10) Connect FanLinc black wire to line with a wire nut
- 11) Ensure all connections are secure with no exposed copper
- 12) Turn breaker back on

*FanLinc light LED turns **green***
*FanLinc fan LED turns **red***

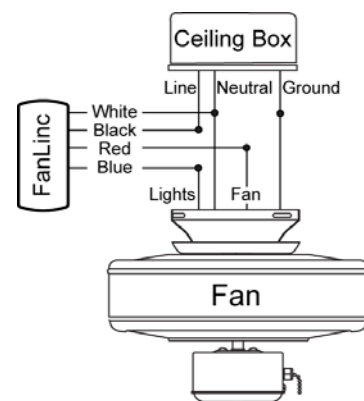

- i. Optional: test by tapping set button a few times
Light will toggle between green (on) and red (off)
 - ii. Optional: cover LEDs with black electrical tape to avoid unwanted LED glow at night which may be visible with some fan cowlings
- 13) While software is highly recommended to manage this hidden device, if you wish to set up any scenes in FanLinc using the set buttons, it is critical that you do so now. See "INSTEON scenes"
 - 14) Carefully remount cowling with FanLinc inside (or in electrical box). Use cable tie (included) to secure FanLinc to fan bracket. Align cable tie with the notch on the FanLinc case ensuring that cable tie and wires will not interfere with any moving parts.

INSTEON Setup

INSTEON remote control is done using scenes. Scenes allow you to instantly "recall" favorite lighting and appliance settings at the touch of a button (or in response to central control or even a sensor). Each scene has at least one controller and at least one responder. Simple scenes can be setup using the instructions below.

Make Fan an INSTEON Responder

Follow the steps below to add your ceiling fan to an INSTEON scene.

- 1) Tap FanLinc Fan set button until FanLinc beeper & LED indicate the desired fan speed

FanLinc fan LED will be in the desired state (see table below)

Tap	Fan Speed	Beeper	LED
1 st	low	Single beep	Blinks Green Slow
2 nd	medium	Double beep	Blinks Green medium
3 rd	high	Fast Double beep	Blinks Green Fast
4 th	off	None	red

- 2) Press & hold the scene controller set button until it beeps¹
Controller LED will start blinking
- 3) Press & hold FanLinc fan set button until FanLinc double-beeps
*FanLinc will (beep)-(beep) and the LED will return to previous state
Controller will (beep)-(beep)¹ and its LED will stop blinking*
- 4) If you wish to add your fan to more scenes, simply repeat these steps
- 5) Temporarily hang the fan from the mounting ring so the fan can spin safely and without obstruction. Then while safely clear of the fan blades confirm the scene addition was successful by pressing on / off on your scene controller
FanLinc fan LED will toggle between green and red

Make Light an INSTEON Responder

Follow the steps below to add your ceiling fan light to an INSTEON scene

- 1) Press & hold the scene controller button until it beeps²
Controller LED will blink
- 2) Tap FanLinc light set button until the ceiling fan light is on
FanLinc light LED will be green
- 3) Press & hold FanLinc light set button until FanLinc double-beeps

¹ Most models

² If the controller does not have a beeper, wait until its LED begins blinking

*FanLinc light LED will flash once & return to **green**
Controller will (beep)-(beep) and its LED will stop blinking*

- 4) Confirm the scene addition was successful by tapping on / off on your scene controller
Ceiling fan light will toggle between on and off
- 5) If you wish to adjust the light's scene on-level and/or ramp rate:
Adjusting on-Level:
 - a. Using your scene controller, adjust the ceiling fan light brightness to the desired brightness for your scene
 - b. Repeat Steps #1 and #3 above
Adjusting Ramp Rate:
 - a. Using your scene controller, adjust the light brightness to correspond with the Ramp Rate desired (Brighter = Faster, Dimmer = Slower)
 - b. Double-tap FanLinc light set button
 - c. Repeat Steps #1 and #3 above
- 6) If you wish to add FanLinc light to more scenes, simply repeat these steps

Remove FanLinc from a Scene as a Responder

Software is recommended.

Note: If you choose to remove FanLinc from use, it is important that you remove scene memberships from all controllers. Otherwise, controllers will retry commands repetitively, creating network delays. Follow the instructions below for each scene controller that FanLinc is a member of.

If you have both fan and light links, removing one will also remove the other. If you'd like to continue using the other link, you'll need to re-create it.

For simplicity sake, the steps below do not cover the removal or re-installation of the ceiling fan.

- 1) Use pull chain to turn fan motor off
- 2) Tap controller scene button
- 3) Press & hold controller set button until it beeps¹
Controller LED will start blinking
- 4) Press & hold controller set button until it beeps again¹
Controller LED will continue blinking
- 5) Press & hold fan (or light) set button until it double-beeps
Controller LED will stop blinking
- 6) Temporarily hang the fan from the mounting ring so the fan can spin safely and without obstruction
 - i. Move safely clear of the fan blades
- 7) Test by turning scene on and off from controller

LED and Beeper Behavior

LEDs

Fan LED	
Green blink slow	Setup: set scene speed to slow
Green blink medium	Setup: set scene speed to medium
Green blink fast	Setup: set scene speed to fast

¹ For devices without beepers hold until its LED begins blinking (this may take 10+ seconds)

Red on	Setup: set scene speed to off
Green on	Fan is on
Red on	Fan is off

Light LED	
Blinking green	Setup: Awaiting X10 address
Blinking red	Setup: Awaiting X10 address removal
Green	Light is on
Red	Light is off

Beeper

Beeper	
Single beep	Enter setup Mode (or transition to next setup Mode)
Double-beep	Setup successful, return to Ready Mode
3 Second beep	Return to Ready Mode (either after setup time-out or user-initiated set button Tap)
Fast beeps	on transition to next fan speed

Advanced Features

Software Only Settings

The following settings are available for programming only via compatible software (i.e. HouseLinc):

- Enable/Disable LEDs
- LED Blink on traffic
- Programming Lock

Using FanLinc as a Phase Bridge

FanLinc automatically bridges the electrical phases in your home (via communications with other dual-band devices on the “other phase”). This is only important if you have powerline only INSTEON products in your home. If you are relying on FanLinc to bridge the electrical phases, use the following procedure to confirm bridging:

- 1) Tap FanLinc light set button four times quickly
 - FanLinc will start (beeping) once per second*
 - FanLinc light LED will turn green*
- 2) Check the LED behavior of other dual-band devices
 - If the “other” dual-band device is blinking green, it is on the other phase
Device provides a phase bridge to FanLinc
 - If the “other” dual-band device is blinking red, it is on the same phase
Device does not provide a phase bridge to FanLinc
Relocate if necessary (and practical)
 - If the “other” dual-band device is not blinking
Device not within RF range of FanLinc

Does not provide a phase bridge to FanLinc

Relocate if necessary (and practical)

- If the “other” dual-band device is exhibiting any other behavior or color, refer to its owners manual

3) Tap FanLinc light set button

FanLinc will stop beeping

*FanLinc light LED will turn **red** if light is off*

Other device LEDs will stop blinking

Add an X10 Address

For the fan

1) Press & hold FanLinc fan set button until it beeps

*FanLinc LED will start blinking **green***

2) Send the desired X10 address, plus on, 3 times (e.g. send B5, BON, B5, BON, B5, BON)

FanLinc will double-beep and the LED will stop blinking

3) Test by sending the X10 address on/off

FanLinc fan will turn on/off

For the light

1) Press & hold FanLinc light set button until it beeps

*FanLinc LED will start blinking **green***

2) Send the desired X10 address, plus on, 3 times (e.g. send B5, BON, B5, BON, B5, BON)

FanLinc will double-beep and the LED will stop blinking

3) Test by sending the X10 address on/off

FanLinc light will turn on/off

For other X10 setup instructions visit <http://www.smarthome.com/insteon-x10-programming.html>

Factory Reset

NOTE: All settings and scenes will be erased

1) If possible, remove all links

2) Press & hold FanLinc light set button until it beeps

*LED will start blinking **green***

3) Press & hold the FanLinc light set button until it beeps again

*LED will start blinking **red***

4) The following three steps must be done quickly to the FanLinc light set button

a. Double-tap

b. Release

c. Press & hold

*FanLinc will (**beep**), LEDs and light will turn off*

*FanLinc will ((((((**beep**)))))) for 5 seconds*

5) Release after beeping stops

*Light LED will turn **green***

Light LED will turn off

*FanLinc will (**beep**)-(beep)*

*Light LED will turn **green***

Fan's light will turn on

Specifications

General

Product Name		FanLinc – INSTEON In-line, Dual-load Module	
Brand		Smarthome	
Manufacturer Product Number		2475F	
UPC		813922011548	
FCC ID		SBP2475F	
Warranty		2 Years, Limited	
INSTEON			
Maximum Links		400	
Software Configurable		Yes, always a	
RF Range		Up to 100' Open Air	
Beeper		Yes	
X10			
X10 Support		Yes	
X10 Addresses		2 max, unassigned by default	
Operation			
Fan Controller		Light Dimmer	
INSTEON		INSTEON	
Group 2		Group 1	
Fan speeds		Brightness levels	
4 (off, slow, medium & fast)		32	
Fan responds to		Dimmer responds to	
on, off, fast on, fast off and dim/brights + X10 commands		on, off, fast on, fast off and dim/brights + X10 commands	
<u>Brightness</u>	<u>Fan</u>		
Off	Off		
1% - 49%	Slow		
50% - 99%	Medium		
100%	Fast		
LED		LED	
Green = on Red = off Setup = varies		Green = on Red = off Setup = varies	
X10		X10	
1 Address, unassigned by default		1 Address, unassigned by default	
Mechanical			
Wires		black – line blue – light red – fan white – neutral (all 16AWG)	

Case Color	White
Plastic	UV Stabilized ABS
Dimensions	114mm L x 50.8mm W x 22.2mm D
Weight	22g (0.05 lb)
Operating Environment	Indoors
Electrical	
Retains all settings without power	Yes, all saved in Non-volatile EEPROM
Voltage	120VAC, Single Phase
Frequency	60Hz
Maximum Dimmer load	300 Watts
Maximum fan load	1 Amp
Safety Approved	ETL (Intertek Testing Services)
Certifications	FCC, IC Canada

Troubleshooting

Problem	Possible Cause	Solution
FanLinc won't add as a Scene responder	FanLinc may be out of range	Try moving an Access Point or installing other Dual-Band devices closer to FanLinc
	The INSTEON signal may not be getting to the "vicinity" of responder	Make sure phases are bridged, add additional INSTEON devices and/or move around existing INSTEON devices
	Large appliances, such as refrigerators or air conditioners, may be producing electrical noise on the power line	Install a power line noise filter (e.g. #1626-10) to filter electrical noise and minimize signal attenuation
	Other electrical devices, such as computers, televisions, or power strips, may be absorbing the INSTEON signal	
FanLinc will not turn on light	Ramp Rate may be extremely slow	Add to scene again, with faster Ramp Rate
	Pull chain on fan light is not in "ON" position	Use pull chain to turn light on
	Controller may be added to scene in off state	Add to scene again, at desired brightness
	Burned out bulbs	Change bulbs
	Loose connection	Turn power off to fan assembly and recheck all connections
FanLinc is taking a long time to respond to scene triggers	Controller may be sending commands to a another responder(s) that is no longer in use	Remove all unused responders from the controller. HINT: If you are using HouseLinc software, you can easily check scene Membership and eliminate any unnecessary
	See Problem #1	If the above doesn't work, perform a factory reset on the controller

Fan speed is too slow or does not turn on	Pull chain on fan is not set to HIGH	Use pull chain to set fan to highest speed setting
	Scene speed was added on slow	Remove from scene and re-add at higher speed
The light is buzzing when on or dim.	The light dimming component inside FanLinc "chops" the power line sine wave to reduce the power.	The bulb filaments are vibrating. Use rough-service, 130 Volt, or appliance-grade bulbs to reduce the noise.
FanLinc is no longer responding.	Small electrical surge or voltage spike	Power cycle: Turn appropriate circuit breaker off, wait 10 seconds and turn back on
		Perform a factory reset on FanLinc and set up scenes again

If you have tried these solutions, reviewed this Owner's Manual, and still cannot resolve an issue you are having with FanLinc, please call: 800-762-7845

Certification and Warranty

Certification

This product has been thoroughly tested by ITS ETL SEMKO, a nationally recognized independent third-party testing laboratory. The North American ETL Listed mark signifies that the device has been tested to and has met the requirements of a widely recognized consensus of U.S. and Canadian device safety standards, that the manufacturing site has been audited, and that the manufacturer has agreed to a program of quarterly factory follow-up inspections to verify continued conformance.

FCC & Industry Canada Compliance Statement

This device complies with FCC Rules Part 15 and Industry Canada RSS-210. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The digital circuitry of this device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause such interference, which can be verified by turning the device off and on, the user is encouraged to eliminate the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna of the device experiencing the interference
- Increase the distance between this device and the receiver
- Connect the device to an AC outlet on a circuit different from the one that supplies power to the receiver
- Consult the dealer or an experienced radio/TV technician

WARNING: Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Limited Warranty

Seller warrants to the original consumer purchaser of this product that, for a period of two years from the date of purchase, this product will be free from defects in material and workmanship and will perform in substantial conformity to the description of the product in this Owner's Manual. This warranty shall not apply to defects or errors caused by misuse or neglect. If the product is found to be defective in material or workmanship, or if the product does not perform as warranted above during the warranty period, Seller will either repair it, replace it, or refund the purchase price, at its option, upon receipt of the product at the address below, postage prepaid, with proof of the date of purchase and an explanation of the defect or error. The repair, replacement, or refund that is provided for above shall be the full extent of Seller's liability with respect to this product. For repair or replacement during the warranty period, call support at 800-762-7845 with the Model # and Revision # of the device to receive an RMA# and send the product, along with all other required materials to:

INSTEON
ATTN: Receiving
16542 Millikan Ave.
Irvine, CA 92606-5027

Limitations

The above warranty is in lieu of and Seller disclaims all other warranties, whether oral or written, express or implied, including any warranty or merchantability or fitness for a particular purpose. Any implied warranty, including any warranty of merchantability or fitness for a particular purpose, which may not be disclaimed or supplanted as provided above shall be limited to the two-year of the express warranty above. No other representation or claim of any nature by any person shall be binding upon Seller or modify the terms of the above warranty and disclaimer.

Home automation devices have the risk of failure to operate, incorrect operation, or electrical or mechanical tampering. For optimal use, manually verify the device state. Any home automation device should be viewed as a convenience, but not as a sole method for controlling your home.

In no event shall Seller be liable for special, incidental, consequential, or other damages resulting from possession or use of this device, including without limitation damage to property and, to the extent permitted by law, personal injury, even if Seller knew or should have known of the possibility of such damages. Some states do not allow limitations on how long an implied warranty lasts and/or the exclusion or limitation of damages, in which case the above limitations and/or exclusions may not apply to you. You may also have other legal rights that may vary from state to state.

Protected under US and Foreign Patents (see www.insteon.com)

© Copyright 2012 Smarthome, 16542 Millikan Ave., Irvine, CA 92606, 800-762-7845, www.smarthome.com